

Installing Guide



01 STEP → Compact the sub base



02 STEP → Lay out the weed barrier



03 STEP → Lay down the shock pad (optional)



04 STEP → Lay out the grass roll



05 STEP → Keep the yarn direction consistently



06 STEP → Trim edges



07 STEP → Fold the trimmed edges; put the adhesive tape below the edges



08 STEP → Put down the edges



09 STEP → Step on the seaming and edges



10 STEP → Fix pins/nails




11 STEP → Sprinkle and level the quartz sand (optional)



12 STEP → Enjoy

Artificial Grass Accessories

Weed barrier

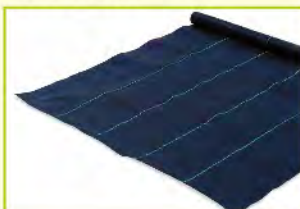


Shock pad



Jointing tape



Pins/nails

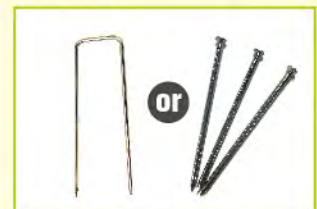



CCGrass

Dedicated to
Manufacturing
the Best

www.ccgrass.com
www.ccgrasslandscape.com

